


# Utility

## WS 62UM 架空电缆中间剥皮器

**Warning! This tool is not protected against electrical shock!** Always use OSHA/ANSI or other industry approved eye protection when using tools. This tool is not to be used for purposes other than intended. Read carefully and understand instructions before using this tool.

该工具专为架空绝缘电缆中间剥皮工作,工作范围从12.70mm to 38.10mm,即25mm<sup>2</sup>到300mm<sup>2</sup>,

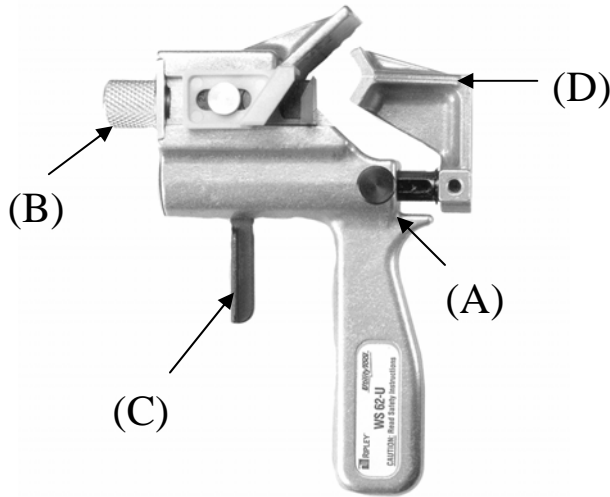

Step 1. 松开旋扭(A), 挤压弹簧扳手(C) 可打开夹嘴 (D) . 夹入绝缘导线 锁紧旋扭(A).

**WARRANTY:** The Ripley Company warrants that our line of tools are free of defect and fully operable at the time of shipment. The warranty is limited to the repair or replacement of any product which proves to be defective in material or workmanship, under normal use and service.



46 Nooks Hill Road  
Cromwell, CT 06416  
Phone: 800-528-8665  
Int'l: (01) 860-635-2200  
Fax: (01) 860-635-3631  
e-mail: info@ripley-tools.com  
Internet: www.ripley-tools.com



Part Number  
Date & Initial


# 操作说明 WS62-U



**Fig. 1**

**Step 2.** 在夹上架空绝缘导线前,请先顺时针旋转旋钮 (B) 使切割刀缩回工具.


**注意:** 当绝缘导线放入工具时,切割刀不要接触导线表面

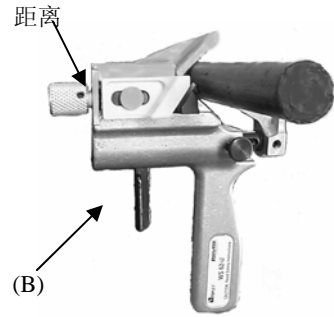

**Fig. 2**

**Step 3.** 调节切割刀,逆时针旋转旋钮 (B) 直到旋钮和工具本体之间产生一个距离.

**注意:** 该距离表示着切割刀深入绝缘导线的深度.

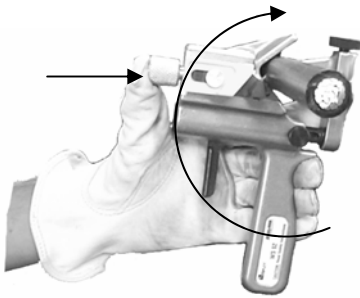


**Fig. 3**

**Step 4.** 在开始剥皮工作前,一只带有手套的手抓住工具,用大拇指按住旋钮(B),并给予一定的压力,使切割刀切入导线表层并旋转如图,当刀片吃入后,既可开始中间剥皮工作.



**Fig. 4**

**Step 5.** 围绕导线旋转并向左面轻微出力,注意可调节切刀深度使之不伤及导体.当你需要的导体剥除后,可采取图5方法停止.

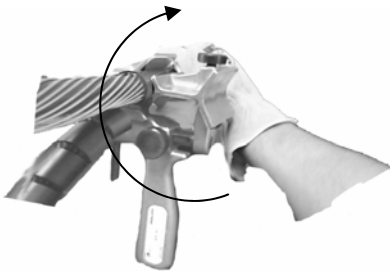

**Fig. 5**

**Step 6.** 可将另一只带有手套的手握在要停止的部位,当剥皮到这时切刀便会自动停止剥皮工作.

**WARRANTY:** The Ripley Company warrants that our line of tools are free of defect and fully operable at the time of shipment. The warranty is limited to the repair or replacement of any product which proves to be defective in material or workmanship, under normal use and service.



46 Nooks Hill Road  
Cromwell, CT 06416  
Phone: 800-528-8665  
Int'l: (01) 860-635-2200  
Fax: (01) 860-635-3631  
E-mail: info@ripley-tools.com  
Internet: www.ripley-tools.com



37266  
8/11/2000 AN