

WS 5 DRILL ADAPTER

WS 5 Drill Adapter Stop Assembly



INSTALLATION INSTRUCTIONS

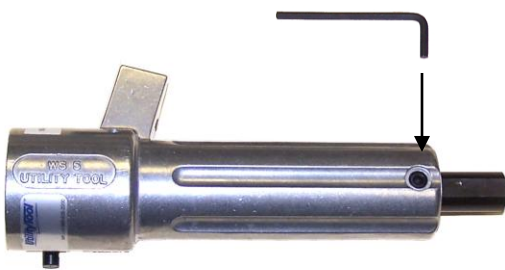


Fig. 1

Step 1 (Fig. 1) To remove the graduated stop bar, use a 1/8" hex wrench and remove the set screw on the body. Pull the graduated stop bar and stop bar bushing out of the backside of the tool body.

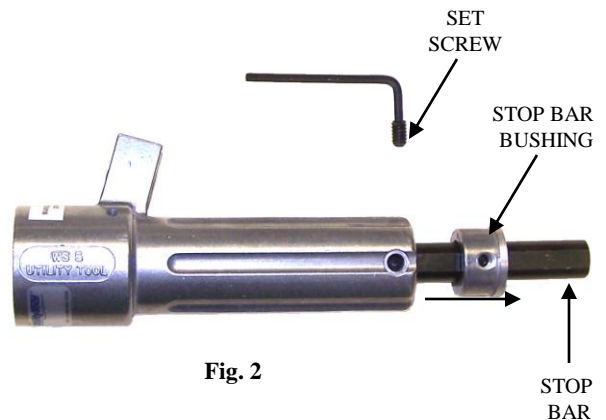


Fig. 2

Step 2 (Fig. 2) Pull the graduated stop bar and stop bar bushing out of the backside of the tool body.

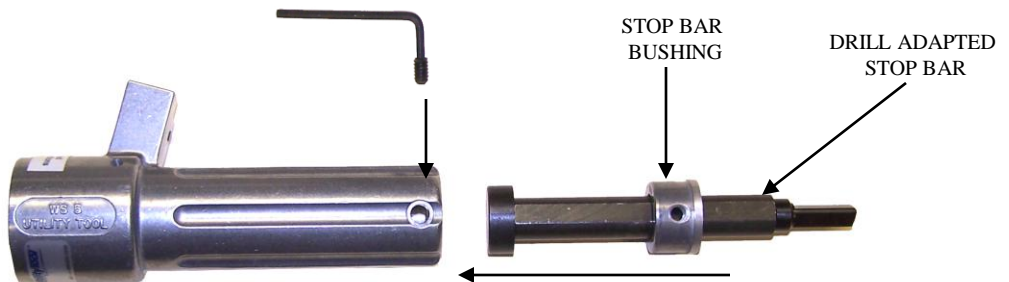


Fig. 3

Step 3 (Fig. 3) Remove the stop bar bushing from the graduated stop bar and place onto the drill adapted stop bar. Insert the drill adapted stop bar with stop bar bushing into the body of the tool. Align the set screw with the stop bar bushing, adjust the conductor length required and tightened down the screw.

Note: Make sure that the graduations on the drill adapted stop bar are on the opposite side of the set screw.